



Assembling steps.

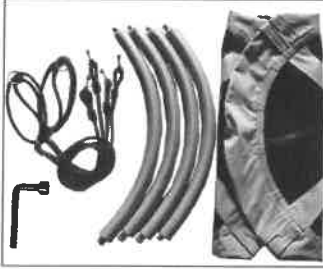


1. Swings arrives in 4 pieces, and 2 hanging ropes, a jump body for assembly.

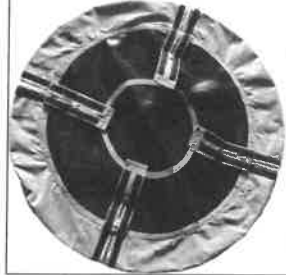


2. Put the jump body on the floor, and put the 4 section to the black mat direction




3. Put the 4 metal tube with foam into the sleeves one by one

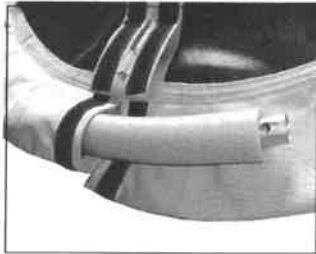

4. Put the tube like this.

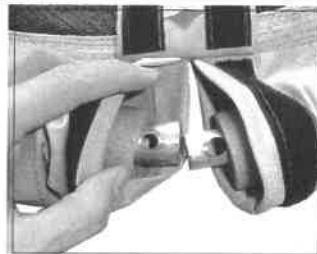

5. Put 2nd tube to the sleeve, small socket to the big socket of the 1st tube, and connect it.

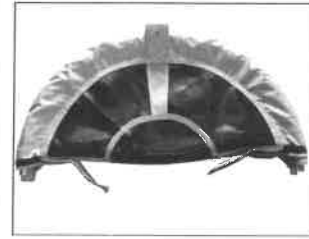

6. repeat it, and make it like half folded as the pic.



7. Then connect the body as a round platform.




8. Assemble the screw bolt, first put it through the velcro blet.



9. Screw bolt go through the velcro blet cover.




10. Assemble the screw bolt to the frame tube.

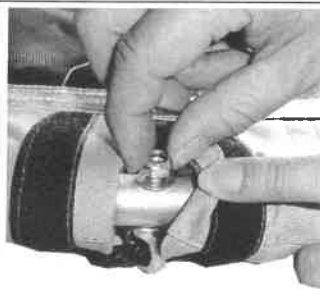

11. Tight it with screw nut, do not forget the washer.



12. Use wrench tight it before use.

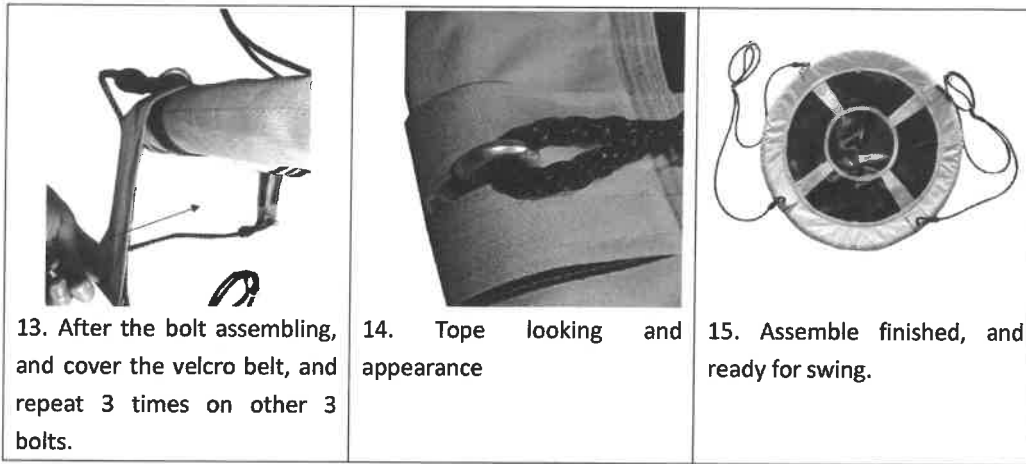

Ensuring Safety of the Swing

Clearance distance should be 13 ft around the swing.

A fall onto a hard surface can result in serious injury to the equipment user.

Do not use the equipment until properly installed.

This swing is not to be used in any other manner other than its intended use.

Adult supervision is required.

Adults should verify that the hanging ropes are secured and cannot be looped back on the swing.

It is important for adults to instruct children to:

- Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous)
- Sit in the center of the swing with full weight on the seat if swinging alone
- Avoid swinging empty seats

It is important for adults to instruct children **NOT to**

- Walk close to, in front of, behind, or between moving items
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope
- Get off the sing while it is in motion
- Climb on the swing when it is wet.
- Attach additional items to the swing that might cause a strangulation hazard.
- Wear a bicycle or sport helmet while on the swing.

Maintaining the Swing

At the beginning of the each play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners, Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration, Replace as needed. The hardware used for this swing(binding post, screw, S hook, lock washer, flat washer, and metal ring) can be found at local hardware store.

- Check metal parts for rust, if found, and and repaint using a non-lead-based paint meeting the ASTM requirements.
- If the swing is hung from swing set frame, then lubricate all metallic moving parts, that are attached by a metal connection.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials(such as mulch or sand) to prevent compaction and to maintain appropriate depth(Min amount is 25cm), replace as needed.

Twice a month during pay season, adults should:

- Tighten all hardware
- Check all protective covering on pipes, edges and corners, Replace if they are loose, cracked, or missing.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials(such as mulch or sand) to prevent compaction and to maintain appropriate depth(Min amount 9.84 inch) Replace as needed.

Once a month during play season, adults should:

- Check all moving parts including ropes for wear or other deterioration.
Replace as needed.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials(such as mulch or sand) to prevent compaction and to maintain appropriate depth(Min amount 9.84 inch) Replace as needed.

At the end of each play season, or when the temperature fall below 4°C , adults should:

- Remove the swing from its outdoor location.
- Store the swing in a dry environment.

Disposing of the swing

To dispose of the swing, first disassemble it, Dispose of it in such a way that no unreasonable hazards will exist at the time that the swing is discarded.

This confirms to ASTM, Consumer safety performance specification for home playground equipment.