




# Commercial Scoop Slide Instructions

1. Install alignment plugs onto the top, middle, and bottom pieces. Lay the slide components face down on a flat surface.

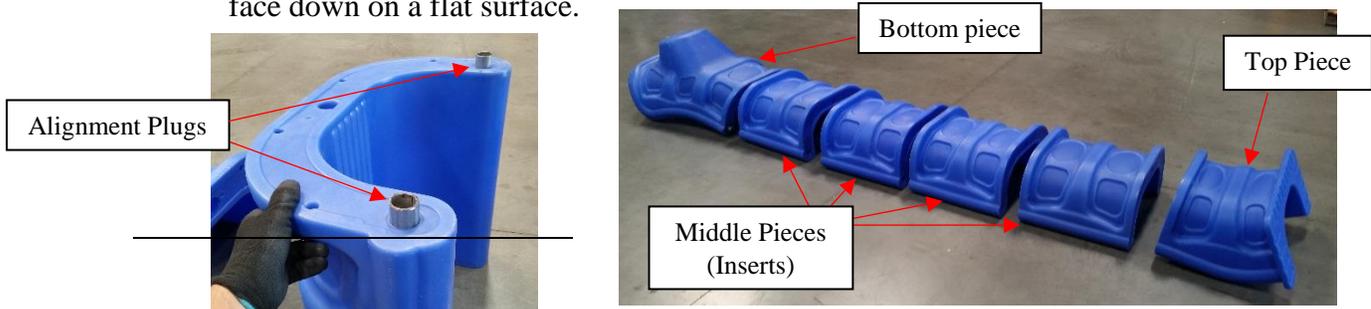

2. Starting from the top piece, insert the four bolts through the joining sections. Tighten all four bolts evenly.

**Note: It is recommended to use thread locker on the bolts to ensure the connections will not loosen up over time.**



3. Repeat Step 2 across all of the inserts. When you are ready to join the bottom piece, you will need to raise the slide in order to properly align the two sections.



4. Check all of the bolts and retighten if needed.



# Commercial Scoop Slide Instructions

**Support Brackets are optional, and not included. Must be purchased separately.**

5. (If not using support brackets, please skip this step.) Remove the bracket head(s) from the support pipe(s). Install the bracket head(s) onto the slide. Tighten and check bolts.



Support Bracket Locations	
SC2 – 2'	<i>First insert from bottom of slide</i>
SC4 – 4'	<i>Third insert from bottom of slide</i>
SC6 – 6'	<i>Fifth insert from bottom of slide</i>

6. Turn the slide over and lift into place.  
There are four predrilled mounting holes on the top piece to fasten the slide to the platform. This may be accomplished with lag screws or through bolts.  
***It is recommended to predrill the holes to avoid splitting the wood of the platform.***
7. (If not using support brackets, please skip this step.) Raise the bottom of the slide approx. 6" off the ground, and thread the support pipe onto the bracket heads. Remove the block and place the slide back onto the ground. Adjust the support bracket to firmly press against the ground. Anchor the support bracket to the ground. (Anchors not included)



8. Recheck all bolts and connections, and retighten if necessary.

Congratulations! Your new slide is ready for use.